


## MC4000 & Traktor Pro 3 Mapping Install Notes

- [Mapping Setup](#)
- [Audio Setup – Windows](#)
- [Audio Setup – Mac](#)
- [Mapping Notes](#)



### Mapping Install

1. [Download](#) and unzip the MC4000 Traktor mapping .tsi file to your computer.
2. Power on the MC4000 and connect the USB to your computer.
3. Open **Traktor Pro 3**.
4. Open **Preferences**.
5. Click the **Import** button from the bottom of the window.
6. Select the MC4000 Traktor Mapping .tsi file.
7. Leave the default boxes checked like below and click **OK**.

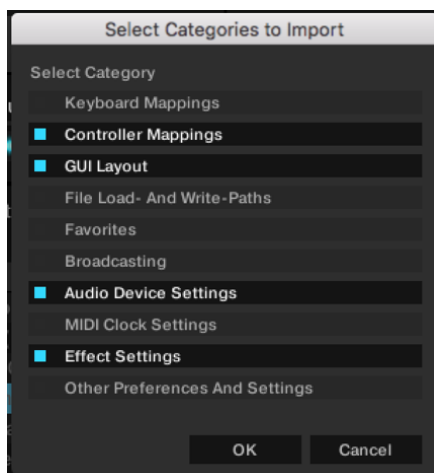

8. Once loaded, select **Controller Manager** tab from the list.
9. Under **Device Setup** you'll want to ensure both the **In-Port** and **Out-Port** are set to **MC4000**.




10. Mapping setup complete. Proceed to Audio Setup below.


## Audio Setup - Windows

**Download** and **Install** the latest Windows driver from the Downloads Software Download page at: <https://www.denondj.com/downloads>

1. Open **Traktor Pro 3**.
2. Open **Preferences**.
3. Choose the **MC4000 ASIO Driver** as your **Audio Device**.
4. Set your desired **Sample Rate**, and **Buffer Size**.

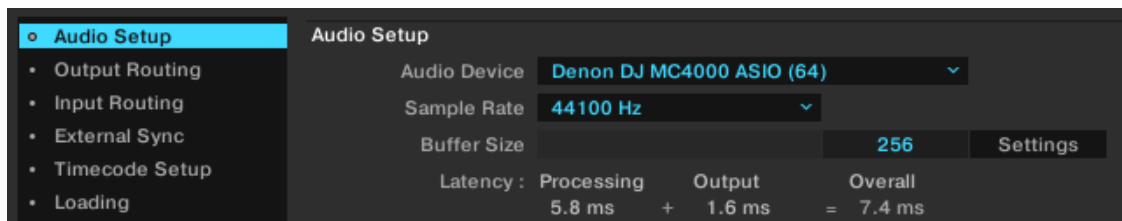

5. Adjust your **Output Routing** to match below:

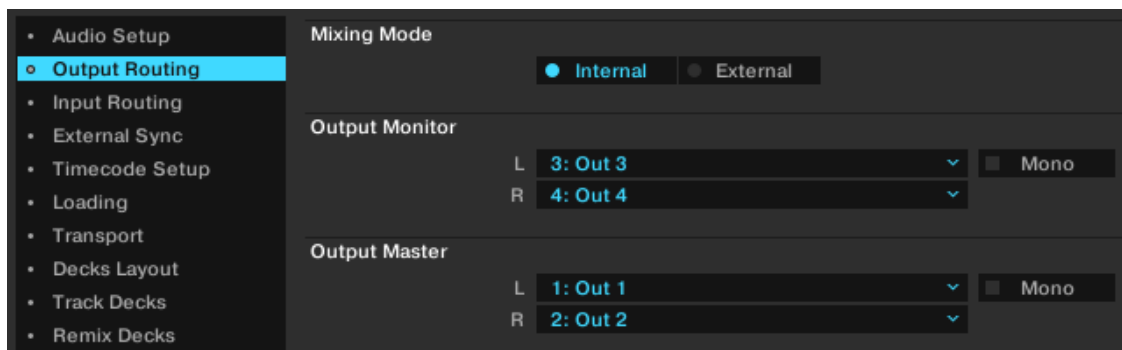


6. Once these settings are correct close the **Preferences** window.
7. Setup complete.


## Audio Setup – Mac

The MC4000 is Class Compliant on Mac and does not require additional audio drivers. Follow the settings below to complete the Audio Setup.

1. Open **Traktor Pro 3**.
2. Open **Preferences**.
3. From Audio Setup, choose **MC4000** as your **Audio Device**.

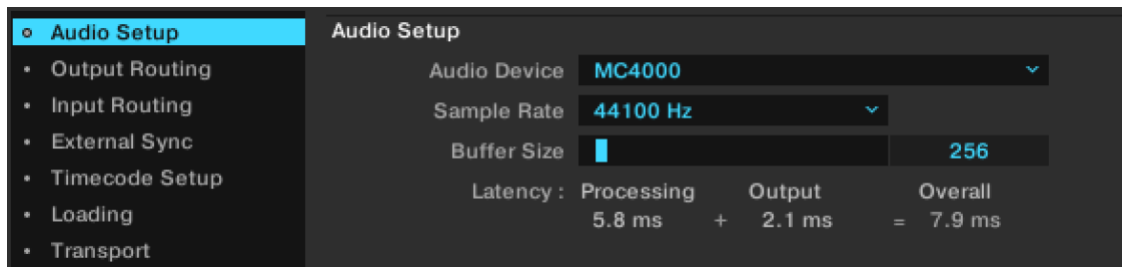

4. Set your desired **Sample Rate**, and **Buffer Size**.
5. Adjust, the **Output Routing** to match below:

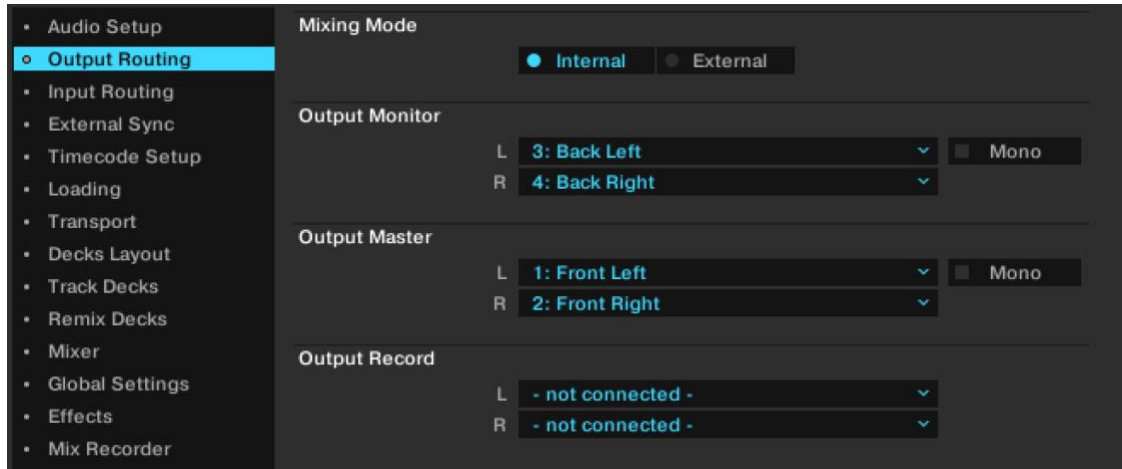

6. Once these settings are correct close the **Preferences** window.
7. Setup complete.

## Mapping Notes

All functions printed on the unit are mapped to similar functions in Traktor with the following exceptions:

- The **RELOOP** button, will trigger momentary a Loop Roll.
- **Censor** functionality was achieved using the **Reverse Grain FX** in slot 3 per deck since there is no censor function in Traktor.
- **Shift + CUE** will enable/disable the FX Unit per deck. Note that FX Unit 1 = Deck A, and FX Unit 2 = Deck B.
- **Shift + LOAD** will instant double the opposite deck.
- **Shift + FILTER** will scroll through mixer FX.

## Pad Modes

The MC4000 utilizes 4 different Pad Modes when used with Traktor. To access the different modes press the Pad Mode button + one of the 4 Hot Cue pads.

1. **Hot Cues 1-4:** While in this mode you can set, trigger and delete Hot Cues 1-4. Shift + Hot Cue Pad will delete the Hot Cue.
2. **Hot Cues 5-8:** While in this mode you can set, trigger and delete Hot Cues 5-8. Shift + Hot Cue Pad will delete the Hot Cue.
3. **Loop Rolls:** While in this mode pressing one of the pads will set a temporary loop roll at 1/8, 1/4, 1/2, and 1 beat. Flux mode is temporarily enabled in this mode so the track playback is not interrupted when triggering loop rolls.
4. **Freeze Mode (Silcer):** This mode will set a 4 beat auto loop and allow you to use the pads to replay the slices of the loop. While in this mode use the pitch bend buttons to decrease and increase the loop size, Shift + Pitch Bend buttons will move the loop backward or forward. You can also use the loop buttons to change settings in this mode. Once you change Pad Modes the loop is inactive. Note that your tracks must be analyzed for this functionality to perform correctly.

## Sample Pads

The 4 Sampler Pads will trigger the first 4 slots of Remix Deck C. When the slot is empty, pressing a pad will load the sample to the pad, pressing the pad again will play the sample slot. Press Shift + Sample Pad to stop and delete the sample.

*Note: 4 Decks must be enabled, and Deck C must be a Remix Deck for this functionality to work correctly.*