

## MC7000 FW Update Instructions

1. Power on the MC7000 while holding down both Left and Right **USB1 & USB2** buttons.

*When done correctly all 4 USB 1& USB 2 LEDs will flash continuously.*

2. Connect the MC7000 to your computer via USB cable.
3. Install or open the Denon DJ Firmware Updater 3.0+ application.
4. Click **File > Select Firmware File...** find the firmware MC7000.bin file, and click **Open**.
5. Click **Update** to send the update file to the MC7000.
6. Once the firmware update data has been received by the MC7000, the units LED's will begin to illuminate displaying the progress of the update. Please wait until the hardware completes the update process, this can take up to 5 minutes.  
**IMPORTANT: Do not power off your device during the update process. USB1 & USB2 LED's on both sides will continuously flash during the update process.**
7. Once complete the MC7000 will restart. Upon powering back on the Blue USB1 LED on both sides will illuminate solid.