

# **IMPORTANT - PLEASE READ**

## **Terms and Conditions of End-User License Agreement**

The software upgrade program for model DN-S3000 provided herewith (the "Software") is proprietary to DENON, Ltd. ("DENON") and has been made available to you only in accordance with and subject to the terms and conditions of this License Agreement. By installing or using the Software, you will be confirming your acceptance of the Software and your agreement to be bound by all of the following terms and conditions, including, without limitation, the disclaimers which are a part thereof:

1. **Title.**  
The Software is the property of DENON. No title or ownership therein or thereto is transferred to you hereunder. This License only provides you with certain prescribed rights to use the Software, subject always to the terms and conditions herein set forth. All rights in and to the Software are reserved by DENON.
2. **Limited Rights of Use.**  
This License only allows you to use the Software for your own internal purposes and solely in connection with Denon's DN-S3000 tabletop CD player (the "Product").
3. **Non-Disclosure.**  
You acknowledge that the Software is proprietary to and a trade secret of DENON, and you agree not to make or distribute copies of the Software or to transfer the Software electronically or otherwise to any other person. Without limiting the generality of the foregoing, you also agree:
  - (a) Not to transfer the Software from one computer to another or over a network.
  - (b) Not to decompile, reverse engineer, disassemble or modify the Software in any way or for any purpose.
  - (c) Not to resell, rent or otherwise transfer the Software to any other person.
  - (d) Not to create or distribute any derivative works based upon the Software or any part thereof.
4. **Limited Warranty.**  
The Software has been provided to you free of charge and on an "AS IS" basis; provided, that, DENON's Limited Warranty shall continue to apply with respect to the Product after installation of the Software, subject to all of the terms and conditions of such Limited Warranty, including its duration based on the original date of purchase of the Product. **DENON makes no other warranty of any kind, express or implied, including, without limitation, any implied warranty of merchantability or fitness for particular purpose, with respect to the Software or the Product.** Without limiting the generality of the foregoing:
  - (a) DENON assumes no responsibility for and shall have no liability of any kind with respect to any problems encountered in conjunction with or arising out of the downloading of the Software, including, without limitation, problems resulting from any interruption that may have occurred while downloading the Software.
  - (b) Neither DENON nor any of its distributors shall be required to provide you with any technical support or services of any kind relating to the Software.
5. **No Consequential Damages.**  
Neither DENON nor any of its distributors shall be liable for any indirect, special, incidental or consequential damages or losses of any kind incurred or arising out of or in connection with your downloading or use of the Software.
6. **Hold Harmless.**  
You agree to release and hold harmless DENON and its distributors of and from any and all claims, demands, suits, proceedings, losses, damages, liabilities, costs and expenses (including attorneys' fees and disbursements) of any kind arising out of or relating to the Software or its use.
7. **Governing Law.**  
The terms and conditions of this License Agreement shall be governed by and construed in accordance with the law of the State of Illinois. Any claims, actions or proceedings relating to this License Agreement or the enforcement hereof shall be brought in the courts of the State of Illinois or Federal courts located in the State of Illinois, and you waive any objection to the jurisdiction of such courts.
8. **Entire Agreement.**  
The terms and conditions herein set forth constitute the entire agreement between you and DENON with respect to the subject matter hereof, and all agreements, commitments, undertakings, understandings or statements of any kind previously made by DENON or any of its distributors with respect to the subject matter hereof are merged herein and superseded by this License Agreement. No amendment or modification of the terms of this License Agreement shall be effective or binding on DENON unless it is made in writing and executed or published by DENON.



# DN-S3000 Plug In Procedure

Please read these instructions several times before performing the actual procedure.

## Step 1: CD-R/RW Creation

1. You should have already downloaded files to a folder of your choice at this point.  
*Example: (C:\DNS3000 or Desktop)*
2. Launch your disc burning software. (Roxio, Nero..etc)
3. Within your software options, select to make a **DATA disc**. (*Not Audio!*)
4. Go to the properties of your burning software and find the **ISO9660** format setting. Refer to our "Software Burning Guide" on page 5&6 or contact your software provider *if* you cannot find it.  
(*You must find and select ISO9660 or the procedure will fail*)
5. Go to the properties of your burning software and find the **MODE/LEVEL** setting. In most cases, they are referred to as, **MODE 1/LEVEL1 CD-ROM**. Refer to our "Software Burning Guide" on page 5&6 or contact your software provider *if* you cannot find it.  
(*You must find and select MODE 1/LEVEL1 CD-ROM or the procedure will fail*)



**Note:** If you are using Windows XP "drag and drop" to burn your disc, the procedure will fail. Windows XP does not give you the option to select, **ISO9960** or **MODE/LEVEL 1**.  
\*You must use third party software such as, Roxio/Easy Creator, Nero...etc.

6. Locate the (1) **.bin** file (**Q3002300**) from where you initially saved them on your PC.
7. Drag and drop the (1) **.bin** file into your burners software project window.



 
The one **.bin** file (listed above) should be the **ONLY** file on the disc to be recorded.  
Please verify before continuing to # 8.

8. Finalize the CD-R/RW at the *slowest possible recording speed*.  
(*You must finalize/close the disc or the procedure will fail*)  
If you're not sure of what you are doing, please use a CD-RW disc so you can erase it and start over.
9. Take the finalized disc over to the DN-S3000 and go to Step 2.



## Step 2: Uploading the System/DSP

1. Turn the power **ON** for the DN-S3000
2. Remove disc (if loaded)
3. Take the **DATA** disc you've just made and insert it into the drive.
4. When the disc is fully inserted, immediately shut the power **OFF**.
5. Press and hold, **Next Track** button and the **>> Fast Search** button (shown below) while turning the power ON...continue to hold these buttons until you see "**Version Up System&DSP**" in the display, then you may release both buttons and standby. You will see the lower display segment bar progress from left to right. Wait about 50 seconds or until the disc is automatically ejected by the drive. \*See Advice!

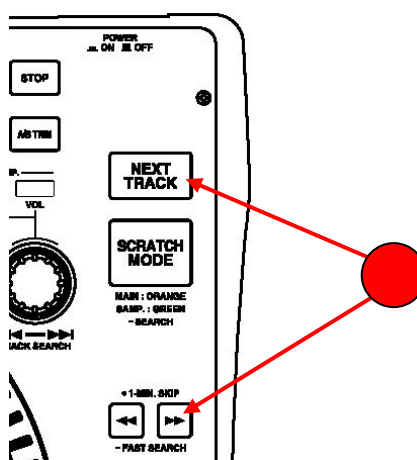

### Advice:

\*If you see "**Disc error**" in the display, please start the procedure over again from step 2-1. \*If you continue to see "**Disc error**" after several attempts, chances are the **DATA** disc was not burned properly as described in Step 1.

6. You will see "**Memory Inz**" & "**Memory Err**" in the display after the disc ejects. This is normal due to the new Preset Menu list, which was added. To clear and reset these items, go into your preset mode by holding down the **[-preset]** button for more than 2 sec, and then turn the track knob to find "**PresetInt?**" Press the track knob down twice to select "**InitialOK?**" The display will say "**Complete**" when finished. Don't worry, your internal memo points are not lost.

---

- - - > Go to next page, Step 3



### Step 3: Verify your software

1. Turn the power OFF, then back ON
2. Press the **[PRESET]** button for more than **2** sec. In PRESET mode turn the track knob counter clockwise until you see "Version". Press down the track knob to verify the **3** version numbers.  
They will be: **SYS 3002 - DSP 7300 - DRIVE 6486**

- - - > Enjoy the new features listed below.

## 7 New Plug Ins added to your DN-S3000!

(as of October 2004)

 
1. Changed default mp3 **File Search System** from "Artist" to "File" upon loading
2. Brake + Hot Start combo operation was improved to avoid a stutter type sound when Key Adjust is on
3. During the Brake effect, the PLAY button can be pushed again for instant sound return
4. Back spinning to the beginning of track 1 no longer goes into CUE mode while in Cont. mode
5. Pitch % Memory:  
You now have two options when saving internal MEMO points regarding PITCH memory
  - A. If you DO NOT wish to save the PITCH value along with your Hot Starts, Loops and Cue points, simply turn the Pitch button OFF before you save your MEMO. When you RECALL at a later time, the PITCH value will remain AS IS and not change.
  - B. If you WANT to save the PITCH value along with your Hot Starts, Loops and Cue points, simply turn the Pitch or Key Adjust ON before you save your MEMO. When you RECALL at a later time, the PITCH and Key Adjust value will be RECALLED as you originally saved it.
6. Added quick jump search values by preset (10/20/30/60sec) by moving the Fast Search Lever to its ends. \*You can find this new item in your –preset menu
7. Added, Pitch Mode preset for: Pitch/Key ON/OFF default at power up  
\*You can find this new item in your –preset menu

# How to properly burn DENON's Plug-In Software to a CD-R/RW

If you are experiencing problems with your upload, chances are you did not select the proper settings within your burning software. The below screen shots are of the two most popular brands that will guide you with these important settings.


**Valid for: DN-D9000, DN-D6000, DN-D4000, DN-S5000, DN-S3000 & DN-S1000**

**Roxio – Easy Creator 5** (Select “Classic” for versions above 6)

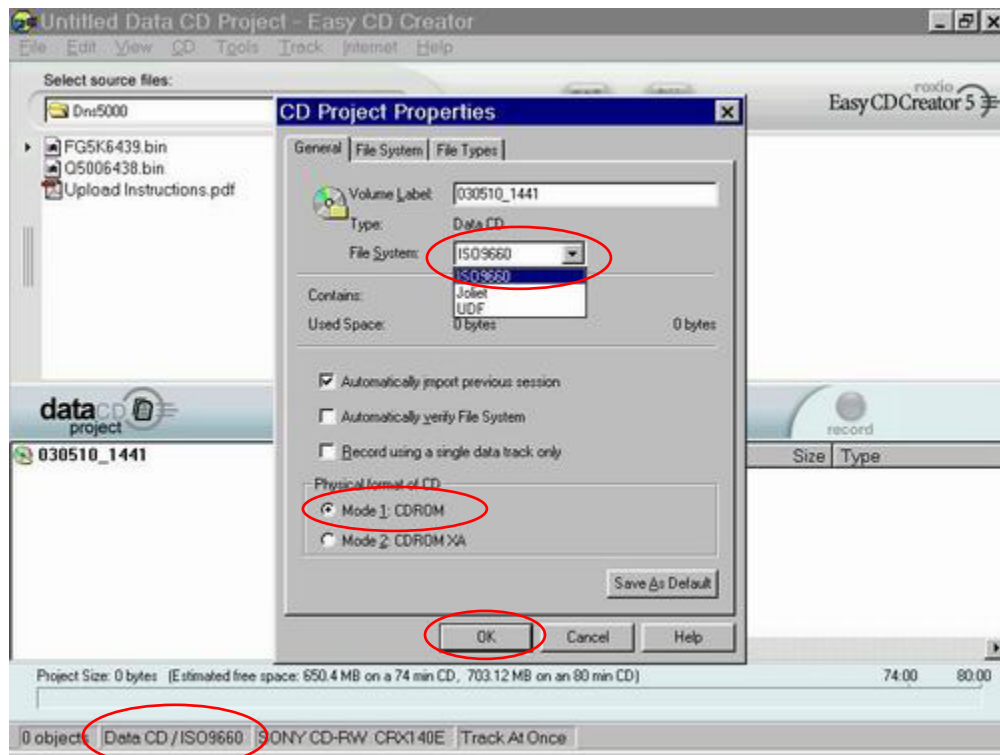

1. Double click on this setting to change your CD properties.
2. Select “ISO9660” circled in red
3. Select “Mode 1” circled in red
4. Select “OK” circled in red
5. Select the required “.bin” file, then finalize at the slowest possible speed.
6. Read the step-by-step instructions included with the download.

## Ahead – Nero

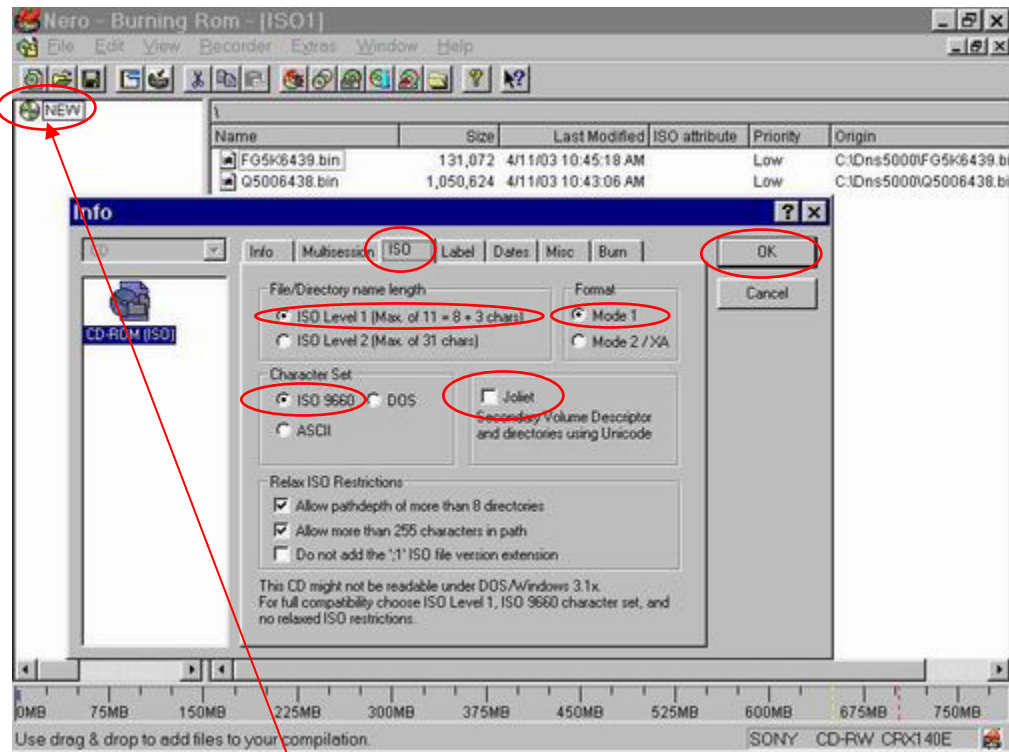 

1. Right click on the "NEW" icon and select "Properties" in the drop down menu to change your CD properties. The Info box will then appear.
2. Select the "ISO" tab circled in red
3. Select "ISO Level 1" File/Directory name length circled in red
4. Select "Mode 1" Format circled in red
5. Select "ISO 9660" Character Set circled in red
6. Uncheck the "Joliet" box circled in red
7. Select "OK" circled in red
8. Select the required ".bin" file, then finalize at the slowest possible speed
9. Read the step-by-step instructions included with the download.



# Available Accessories



DENON DJ



# DN-S5000/S3000 Available Accessories

## S5000 Optional Top Panels



DENTPS5KSILVER



DENTPS5KBLUE



DENTPS5KGOLD

## S3000 Optional Top Panels



DENTPS3KSILVER



DENTPS3KBLUE



DENTPS3KGOLD



# DN-S5000/S3000 Available Accessories

## UDG – Custom Travel Bags

DENUDG3K

