



Configuration of DN-X1600 with MAC Audio/MIDI Setup (OSX 10.5.x)

- On the MAC, go to **Applications > Utilities > Audio MIDI Setup**
- **Select DN-X1600 in “Default Input” column.**
- **Select DN-X1600 in “Default Output” column.**
- **Select Format Frequency same as ”SystemSetting” in DN-X1600’s Utility stettings**
- **Select 8ch-24bit value in “Fomat CH”**

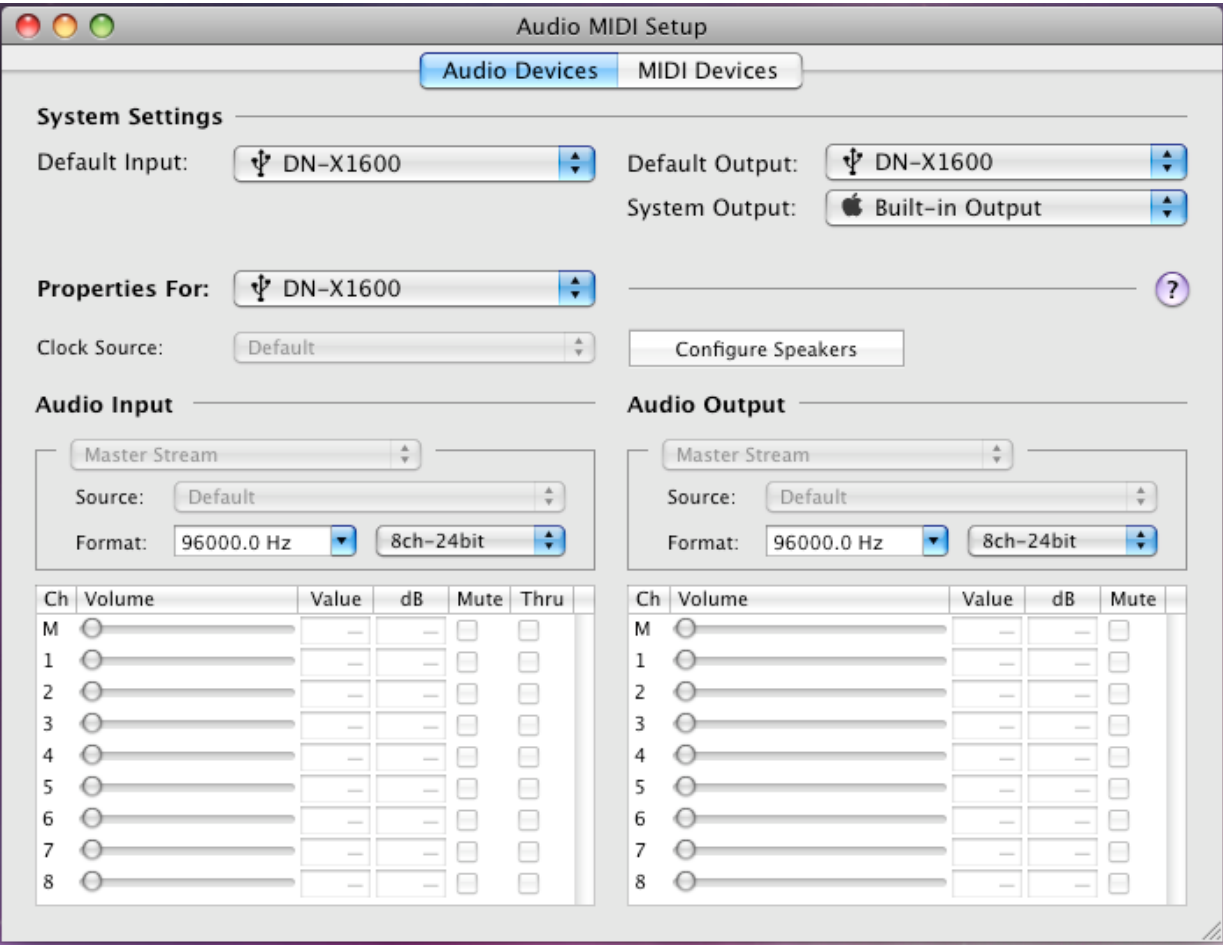

Configuration of DN-X1600 with MAC Audio/MIDI Setup (OSX 10.6.x)

- On the MAC, go to **Applications > Utilities > Audio MIDI Setup**
- **Show Audio Window**
- **Select DN-X1600 on left window and mouse right button push.**
- ① Select “Use this device for sound input”.
- ② Select “Use this device for sound output”.

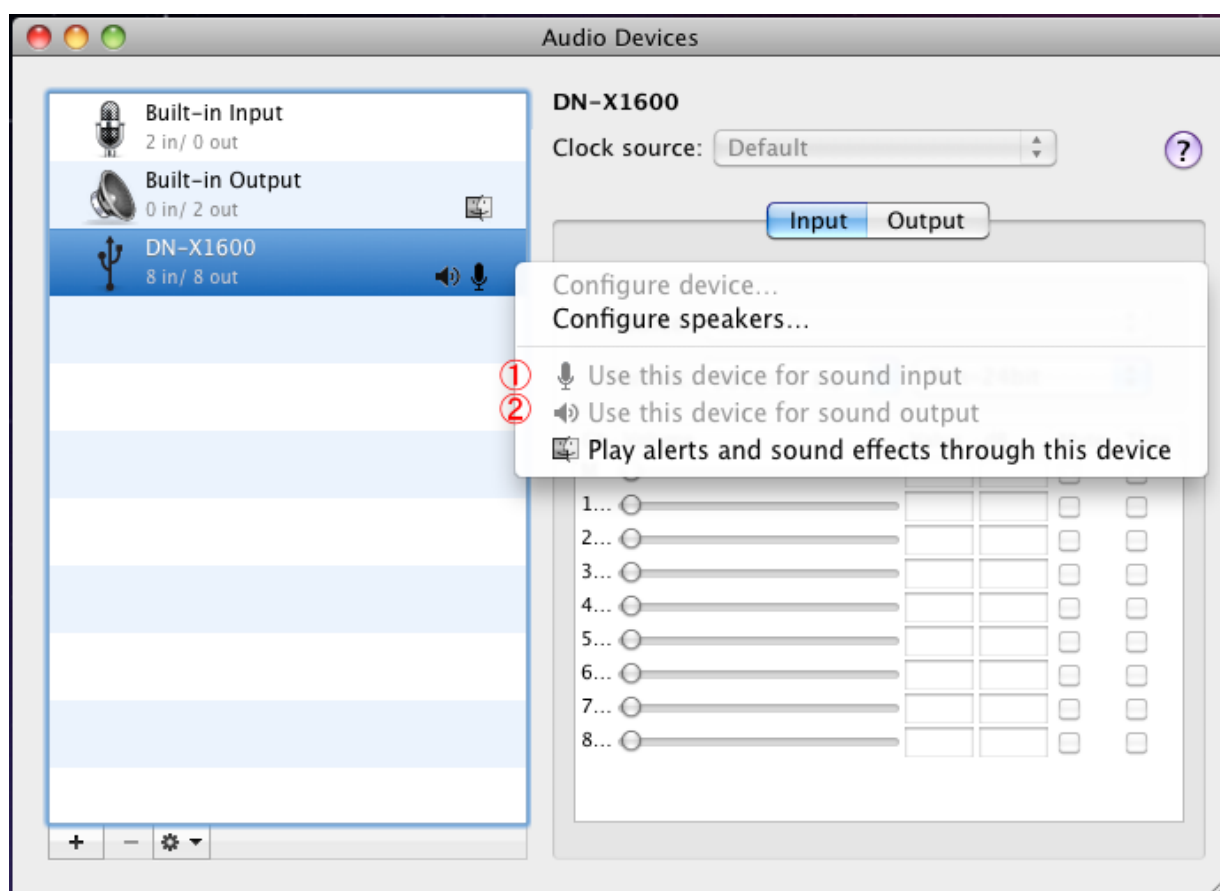

- ③④ Select Format Frequency same as "SystemSetting" in DN-X1600's Utility settings
- ③④ Select 8ch-24bit value in "Format CH"

