TRAKTOR PRO

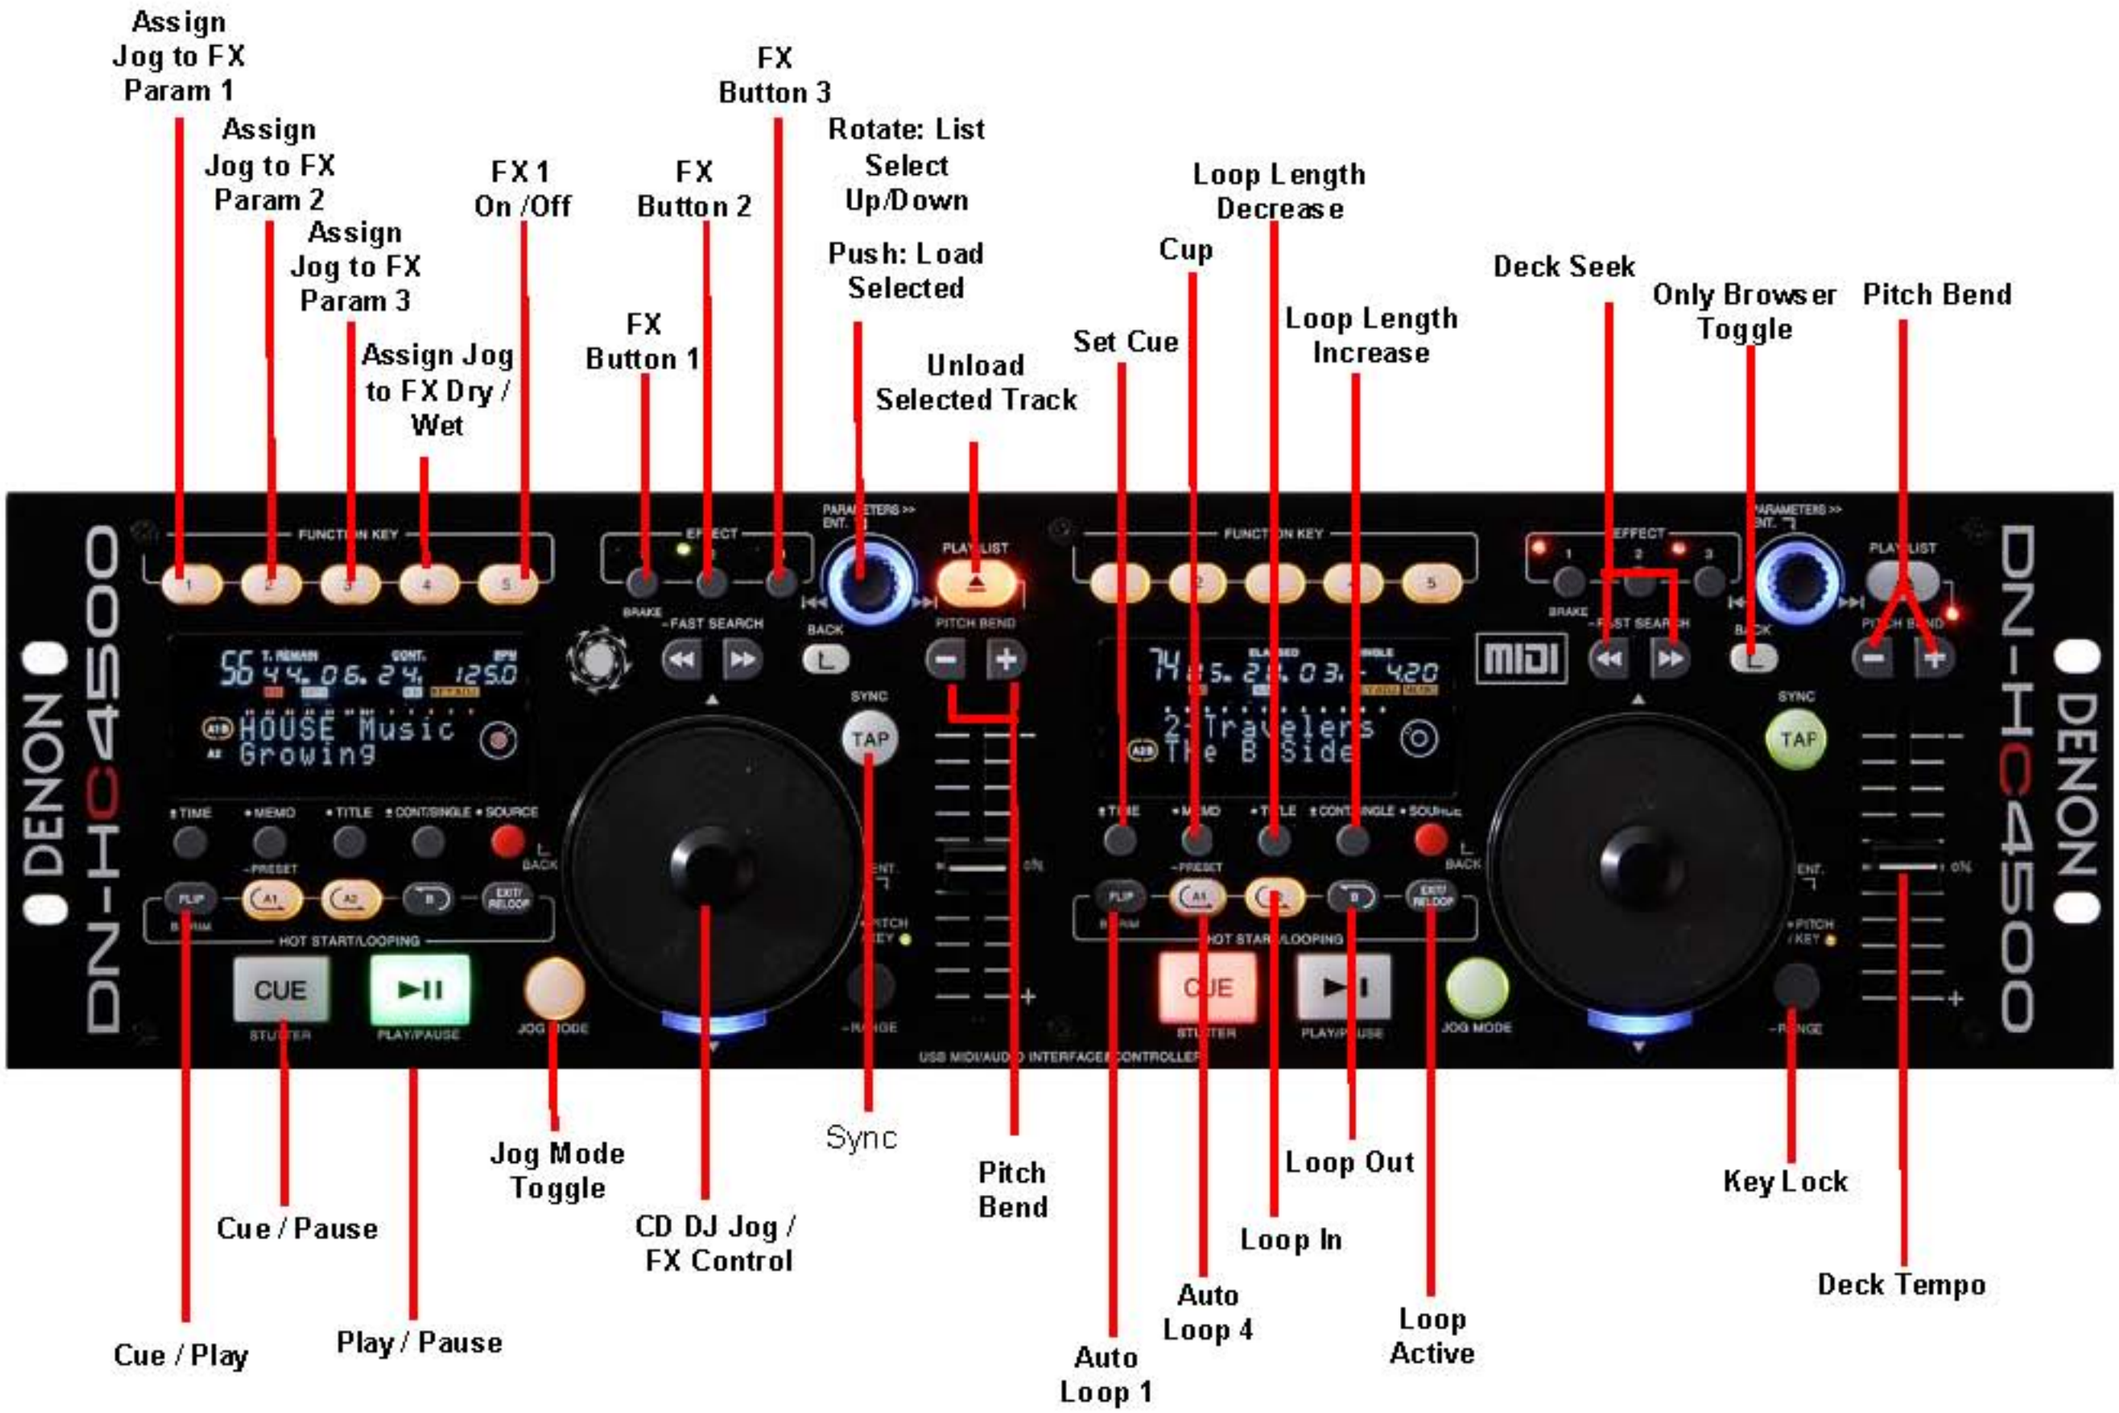
Assign Jog to FX Param 1
Assign Jog to FX Param 2
Assign Jog to FX Param 3
Assign Jog to FX Dry / Wet
FX 1 On /Off
FX Button 1
FX Button 2
FX Button 3
Rotate: List Select Up/Down
Push: Load Selected
Unload Selected Track
Set Cue
Cup
Loop Length Decrease
Loop Length Increase
Deck Seek
Only Browser Toggle
Pitch Bend
Cue / Play
Cue / Pause
Play / Pause
Jog Mode Toggle
CD DJ Jog / FX Control
Sync
Pitch Bend
Auto Loop 1
Auto Loop 4
Loop In
Loop Out
Loop Active
Key Lock
Deck Tempo
DENON DN-HC4500
CUE
PLAY/PAUSE
TAP
SYNC
HOT START/LOOPING
FUNCTION KEY
EFFECT
PLAYLIST
PITCH BEND
FAST SEARCH
BACK
BRAKE
JOG MODE
MIDI
HOUSE Music Growing
2 Travelers The B Side